



WARNING!

Before replacing actuator, damper must be inspected and determined to be fully functional.

Ruskin Honeywell ML & MS to Belimo Replacement Instructions

Contents

UL [®]	2
Code and Standard Issues.....	2
NFPA 80 (Fire) & NFPA 105 (Smoke).....	3
Local Code Approval.....	4
Cross Reference	5
Typical installations.....	8
Direct Coupling	10
Linkage mounting.....	18
Miscellaneous parts	19
Wiring	20
Thermal sensor replacements.....	23
Auxiliary Switches	23
Building Official / Fire Marshal Notification Form	25

Contacts:

Chris Sheehan 203 749-3112	Larry Felker 775 355-2461 (775 250-4160 Cell)
Mike Knipple 203 749-3170	Laure Pomianowski 775 355-2466
800 543-9038	



WARNING!

Installer must be trained and experienced with repair of fire and smoke dampers and actuators.

www.belimo.us/firesmoke

UL®

In the "Marking & Application Guide, Dampers for Fire Barrier and Smoke Applications & Ceiling Dampers" April 2013 by Underwriters Laboratories Inc.®, page 6 they state:

DAMPER ACTUATORS

"... field mounting or substitution of actuators is not covered within the scope of the UL certification of the product. However, this does not necessarily preclude replacement of actuators in the field. Like any appliance, field servicing of these products is not covered under the scope of the UL certification and factory follow-up service program. As with any part of the damper, it is expected that replacement of actuators in the field be done in accordance with the damper manufacturer's normal field servicing program."

Code and Standard Issues

In general, the administrative section of codes state that all mechanical and electrical systems must be kept in working order and an individual section may state that all life safety devices and systems must be operable. NFPA 80 (Fire) & NFPA 105 (Smoke) require periodic testing and repair of dampers as soon as possible after any deficiency is uncovered.

Chapter 7 IBC & IFC "Containment" Dampers	
Commissioning	
End of first year	
Every 4 years except in hospitals every 6 years	
Chapter 9 IFC "Smoke Control System" Dampers	
Dedicated	Non-dedicated
Commissioning	Commissioning
Semi-annually	Annually
Chapter 9 IBC & IFC	
Fire detection & Smoke control systems	
Dedicated	Non-dedicated
Weekly self-test	Not required

Fire & smoke dampers are appliances and field replacement of components is required when failure of any component occurs.

The Authority Having Jurisdiction (local Fire Marshal and/or Building Official) must be consulted if any blade or auxiliary switches are employed and are connected to the fire alarm system or to a Fire Fighters Smoke Control System (FSCS) panel. Retesting is required. A permit and inspection may be required since connections to an alarm system have been touched.

NFPA 80 (Fire) & NFPA 105 (Smoke)

NFPA requires damper inspection and repair of dampers.
See www.nfpa.org for Standards.

See NFPA 80 & NFPA 105 for details. The damper cleaning and examination check list here is based on them.

Damper installation shall meet code requirements. Fire stopping and drywall integrity shall be confirmed. Damper blades shall be in plane of wall. Duct shall be fall away with no fasteners connected to damper sleeve.

- a. Dampers and ducts shall be cleaned of all foreign debris and dust build-up.
- b. All exposed moving parts of the damper shall be dry lubricated as required by the manufacturer. Do not use oil as it draws dirt.
- c. Damper shall be examined without defective old motor or new actuator to determine:
 - i. The damper shall fully close from the open position.
 - ii. Damper shall fully open from the closed position.
 - iii. There are no obstructions to the operation of the damper. The damper shall not be blocked from closure in any way due to rusted, bent, misaligned, or damaged frame or blades. The damper shall not have defective hinges, side &/or blade seals, or other moving parts. The damper frame shall not be penetrated by any foreign objects that would affect operation.
- d. If the damper is equipped with a fusible link, the link shall be removed for testing to ensure full closure and lock-in-place if so equipped. If the link is damaged or painted, it shall be replaced with a link of the same size, temperature, and load rating.
- e. The fusible link shall be reinstalled after testing is complete.

After installation and wiring of new actuator it shall be tested.

- a. The checklist may be customized using material here and in NFPA Standards. Multiple geometric configurations of springs, fusible link, thermal sensor(s), and actuation are possible. Confirm with AHJ if any additional requirements exist.
- b. Electric thermal sensors, if present, must be tested and replaced if defective.
- c. The test shall be conducted with normal HVAC airflow.
- d. When equipped with smoke detection activation, the smoke detector shall be activated and damper operation observed.

Test voltage input to actuators and repair as necessary if voltage is not correct. Old breakers often deliver below 115V. When motors burn out, they can damage the breaker. Then functioning motors are damaged by power supply problems.

A record of all repairs must be kept and made available to AHJ.

For the Air Movement and Control Association damper maintenance manual go to:
http://www.amca.org/publications/damper_maintenance.aspx

Local Code Approval

While it is not detailed in codes, the following rules should be followed for selecting Belimo actuators for replacement:

Check the technical specifications to ensure an “equal or better” actuator is used.

- **Temperature** – the replacement actuator shall have been UL555S tested at the same or better temperature as the original actuator. 250°F or 350°F are standard. (Code is 250°F. However, in engineered smoke control systems the consulting engineer may have required 350°F. Tunnels and some other applications require higher temperatures.)
- **Time** – the replacement actuator shall drive open and spring closed at a speed equal or faster than presently required by codes. (<75 seconds is UL 555S and most codes. Las Vegas is 60 seconds. Consult the AHJ with any questions.)
- **Torque** – replacement actuator shall have equal or greater torque than the failed actuator.
- **Voltage** – replacement actuator shall have the same voltage rating as the original.
- **Amperage** – the replacement actuator(s) shall not draw more amperage than the original(s) and cause the total connected amp draw on a circuit breaker to be greater than allowed by electrical code. (This is not a problem as Belimo actuators draw very low current.)
- **Final Testing** – actuated damper and associated devices shall be tested for proper operation. See Acceptance testing details below.

Mnemonic device: TTT-VAT)



WARNING!

In all cases, installation must comply with any and all local electrical and life safety codes. Operation of the system after installation must be performed to verify proper damper cycling. Final checkout requires verifying correct function.



WARNING!

Note that where any fire alarm wiring is touched, the fire department must be informed.

Cross Reference

For greater detail see www.belimo.us/firesmoke RETROFIT or download from https://www.belimo.us/mam/americas/technical_documents/pdf-web/fire_and_smoke_doc/fire_smoke_competitive_replacement_data_reference.pdf

Honeywell	Voltage	Control	Torque	Aux	Replacement	
ML4105A1000	120 VAC	On/Off	30		FSLF120 US	*
ML4105B1009	120 VAC	On/Off	30		FSLF120 US	*
ML4105C1008	230 VAC	On/Off	30		FSLF230 US	*
ML4105D1007	230 VAC	On/Off	30		FSLF230 US	*
ML4115A1009	120 VAC	On/Off	30		FSLF120 US	*
ML4115A1017	120 VAC	On/Off	30		FSLF120 US	*
ML4115B1008	120 VAC	On/Off	30		FSLF120 US	*
ML4115B1016	120 VAC	On/Off	30		FSLF120 US	*
ML4115C1007	230 VAC	On/Off	30		FSLF230 US	*
ML4115C1015	230 VAC	On/Off	30		FSLF230 US	*
ML4115D1006	230 VAC	On/Off	30		FSLF230 US	*
ML4115D1014	230 VAC	On/Off	30		FSLF230 US	*
ML4115H1002	120 VAC	On/Off	30		FSLF120 US	*
ML4115J1019	120 VAC	On/Off	30		FSLF120 US	*
ML4202F1000	120 VAC	On/Off	20		FSLF120 US	*
ML4202F1000	120VAC	On/Off	20		FSLF120 US	*
ML4302F1008	120 VAC	On/Off	20		FSLF120 US	*
ML8105A1006	24 VAC	On/Off	30		FSLF24 US	*
ML8105B1005	24 VAC	On/Off	30		FSLF24 US	*
ML8115A1005	24 VAC	On/Off	30		FSLF24 US	*
ML8115A1013	24 VAC	On/Off	30		FSLF24 US	*
ML8115B1004	24 VAC	On/Off	30		FSLF24 US	*
ML8115B1012	24 VAC	On/Off	30		FSLF24 US	*
ML8115H	24 VAC	On/Off	30		FSLF24 US	*
ML8115J	24 VAC	On/Off	30		FSLF24 US	*
ML8202	24 VAC	On/Off	20		FSLF24 US	*
ML8302	24 VAC	On/Off	20		FSLF24 US	*
MS4104F1010	120 VAC	On/Off	30		FSLF120 US	*
MS4104F1210	120 VAC	On/Off	30	2	FSLF120-S US	*
MS4109F1010	120 VAC	On/Off	80		FSNF120 US	
MS4109F1210	120 VAC	On/Off	80	2	FSNF120-S	
MS4120F1006	120 VAC	On/Off	175		FSAFA120	
MS4120F1204	120 VAC	On/Off	175	2	FSAF120A-S	
MS4209F1007	120 VAC	On/Off	80		FSNF120 US	
MS4309F1005	120 VAC	On/Off	80		FSNF120 US	

MS4604F1010	230 VAC	On/Off	30		FSLF230	*
MS4604F1210	230 VAC	On/Off	30	2	FSLF230-S	*
MS4609F1010	230 VAC	On/Off	80		FSNF230	
MS4609F1210	230 VAC	On/Off	80	2	FSNF230-S	
MS4620F1005	230 VAC	On/Off	175		FSAF230A	
MS4620F1203	230 VAC	On/Off	175	2	FSAF230A-S	
MS4709F1014	230 VAC	On/Off	80		FSNF230 US	
MS4809F1012	230 VAC	On/Off	80		FSNF230 US	
MS7520A2015	24 VAC	2-10V, 4-20mA	175		FSAFB24-SR US	
MS8104F1010	24 VAC	On/Off	30		FSLF24	*
MS8104F1210	24 VAC	On/Off	30		FSLF24	*
MS8109F1010	24 VAC	On/Off	80		FSNF24	
MS8109F1210	24 VAC	On/Off	80	2	FSNF24-S	
MS8120F1002	24 VAC	On/Off	175		FSAF24A	
MS8120F1200	24 VAC	On/Off	175	2	FSAF24A-S	
MS8209F1003	24 VAC	On/Off	80		FSNF24 US	
MS8309F1001	24 VAC	On/Off	80		FSNF24 US	
S20230-F	230 VAC	On/Off	175		FSAF230A	
S20230-F-SW2	230 VAC	On/Off	175	2	FSAF230A-S	
S2024-F	24 VAC	On/Off	175		FSAF24A	
S2024-F-SW2	24 VAC	On/Off	175	2	FSAF24A-S	
SPH2 Aux Switch						**
32003532-002 Aux Switch						**

* Use FSNF series if damper is > 4 sq.ft.

** Use -S model of proper voltage.

Nominal sq.ft. per UL555S testing.	Temp	Actuator	
<4	350°F	FSLF	36" w x 24" h also.
<12	350°F	FSNF	Multisections also.
<16	250°F	FSNF	Multisections also.
<18	350°F	FSAF*A	Multisections also.

The FSTF series actuators were introduced in 2013. They are 18 in-lb and designed for under 1.5 sq.ft. of fire and smoke damper. Use on larger dampers only when replacing an existing FSTF on a fire and smoke damper. The FSLF is recommended for small dampers.

Belimo actuators pass UL555S at the same damper sizes as the Honeywell.	NOTE. Although an actuator may operate a larger sized damper use the UL listed sizing. Call for assistance.
---	---

Ruskin part

Belimo Replacement

Ruskin part #					
Model	Power			< 4 sq.ft.	> 4 sq.ft.
H2000A/x	120	CCW		FSLF120	FSNF120
H2000B/x	120	CW		"	"
H2024A/x	24	CCW		FSLF24	FSNF24
H2024B/x	24	CW		"	"
H2230A/x	230	CCW		FSLF230	FSNF230
H2230B/x	230	CW		"	"
SPH2 Aux Switch				Use -S model of proper voltage.	
32003532-002 Aux Switch				Use -S model of proper voltage.	

Siemens

Make & Model	Power	Belimo Replacement	
GGD121	24	FSAF24	FSNF24
GGD221	120	FSAF120	FSNF120
GGD321	230	FSAF230	FSNF230

GND12x.1x	24V		FSLF24
GND22x.1x	120V		FSLF120
GND32x.1x	230V		FSLF230

Electronic Fuse Link (24 Vac)

ASK79.165 165°F (74°C)	BAE165 US
ASK79.212 212°F (100°F)	None. Call if needed.
ASK79.250 250°F (121°C)	None. Call if needed.
ASK79.350 350°F (177°C)	None. Call if needed.

Optional	Two Auxiliary Switches Fixed 5° and 85°
----------	---

Siebe/Barber Coleman	Power	Torque	Aux Switches	Belimo	Notes
MA220	120 VAC	30		FSLF120 US	1, 2, 4
MA221	240 VAC	30		FSLF230 US	1, 2, 4
MA223	24 VAC	30		FSLF24 US	1, 2, 4
MA230	120 VAC	50		FSNF120 US	1, 2, 3
MA231	240 VAC	50		FSNF230 US	1, 2, 3
MA233	24 VAC	50		FSNF24 US	1, 2, 3
MA240	120 VAC	50			5,6
MA250	120 VAC	50		FSNF120 US	1, 2, 3, 4
MA251	230 VAC	50		FSNF230 US	1, 2, 3, 4
MA253	24 VAC	50		FSNF24 US	1, 2, 3, 4
MA-318	24 VAC	60		FSNF24 US	1, 3
MA-318-500	24 VAC	60	1	FSNF24 -S US	1, 3
MA-418	120 VAC	60		FSNF120 US	1, 3
MA-418-500	120 VAC	60	1	FSNF120-S US	1, 3
1	Direct couple the Belimo where shaft is available. Some were direct coupled..				
2	FSTF <1.5 sq.ft. FSLF <4 sq.ft.				
3	FSNF <12 sq.ft. FSAF*A <18 sq.ft.				
4	For Pottorff with shaft spring see: https://www.belimo.us/mam/americas/technical_documents/pdf-web/fire_and_smoke_doc/pottorff-ma2xx_to_belimo.pdf				
5	Motor was not 90 degree and pulley and cable were usually used. Some geometric changes are necessary to simplify.				
6	Provide photos. Motor, linkage, blades, fusible link, McCabe © Link, Typically direct couple to damper shaft if available. Otherwise, investigation necessary.				

Typical installations



Typical replacement – white arrow shows location of Honeywell and black arrow shows replacement Belimo.



Defective
ML 4115



New Belimo
FSNF120

The Belimo mounts over the shaft as does the Honeywell. Space constraints are rare. See below for anti-rotation strap and wiring.

Direct Coupling




FSLF mounted on the damper shaft. Two sheet metal screws hold the anti-rotation strap. Two nuts secure cold-weld clamp onto shaft.



FSNF mounted on the damper shaft. Two screws hold the anti-rotation strap. Two nuts secure cold-weld clamp onto shaft.

FSAF mounts the same.

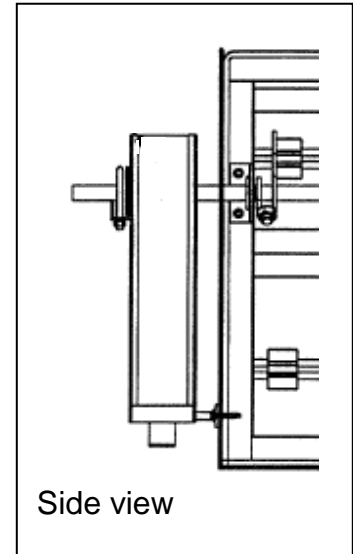


Note that actuator floats freely. Clamp cold welds when teeth dig into the damper shaft and the anti-rotation strap stud allows the actuator to move if shaft is not perfectly concentric. Rigid mounting by jamming the stud into the U-slot of actuator is NOT usually best.



FSLF mounted on damper shaft with a plate extended for the anti-rotation strap.

FSNF mounted on the damper shaft. Two screws hold the anti-rotation strap. Two nuts secure cold-weld clamp onto shaft.

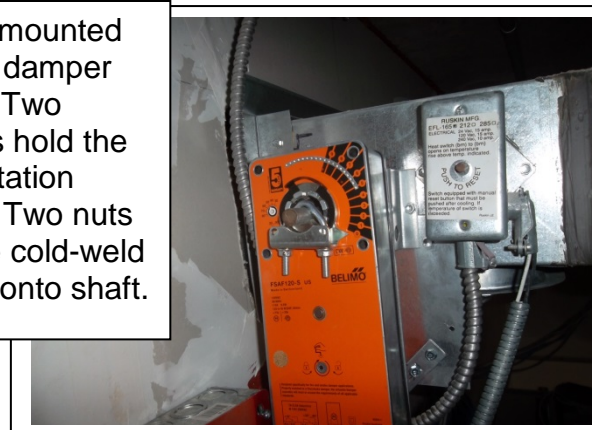

**WARNING!****USE CAUTION!**

Spring is under high torsion and may cause serious injury! If any external springs are present, exercise caution – wear face and hand protection.

**WARNING!**

Read Data Sheet provided in box with each actuator for specific wiring details.

Depending on the geometry, any number of mounting arrangements are correct. The most common is shown at left.

Alternately, the anti-rotation strap can be attached to any Belimo linkage, an electrical J-box cover plate, or to a piece of U-channel.

It is important to remember that the ducts are fall-away. The actuator mounting cannot interfere with the ability of the duct to fall from the damper. The damper must continue to protect the wall.

Mounting

The Belimo Anti-rotation strap may be attached to the HW bracket or to the sleeve. Duct must be able to fall away; do not attach so that this is prevented. A 4" x 4" or larger electrical plate will serve as an anti-rotation mounting plate if old actuator is hung over free air.



Anti-rotation strap can be attached to bracket, 4 x 4 plate, or sheet metal bracket.




Example of damper manufacturer plate extended where space constraint exists. A 4"x4" electrical box cover is one way to attach the anti-rotation strap.



WARNING!

Actuator anti-rotation strap may not be screwed to the duct. It must attach to either the sleeve or to the mounting bracket. The duct must be able to fall away from the damper in case of ceiling collapse in a fire.


Anti-rotation strap



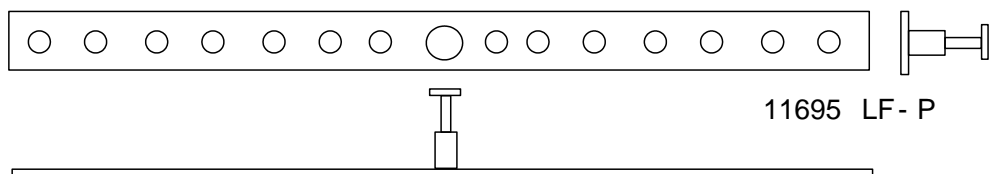


Bend strap at perforations to adjust for necessary height




The heavier duty 11414 AF-P may be ordered when needed



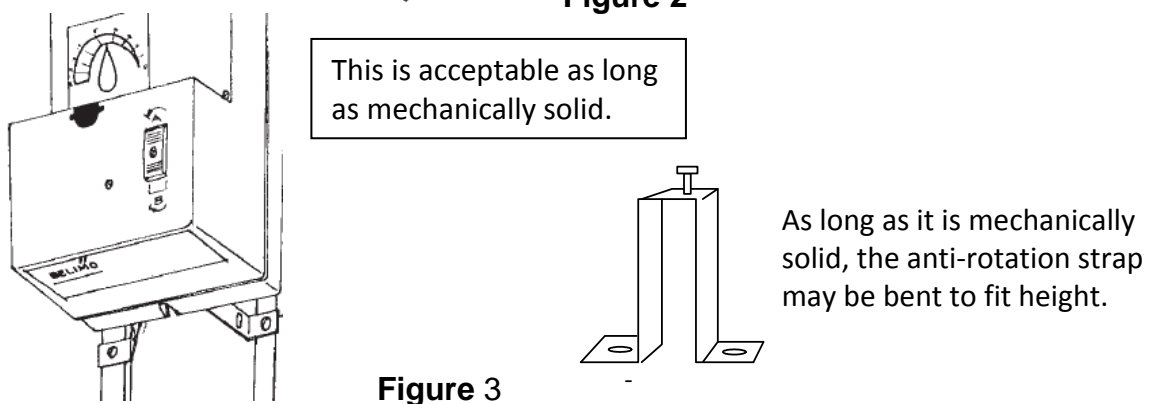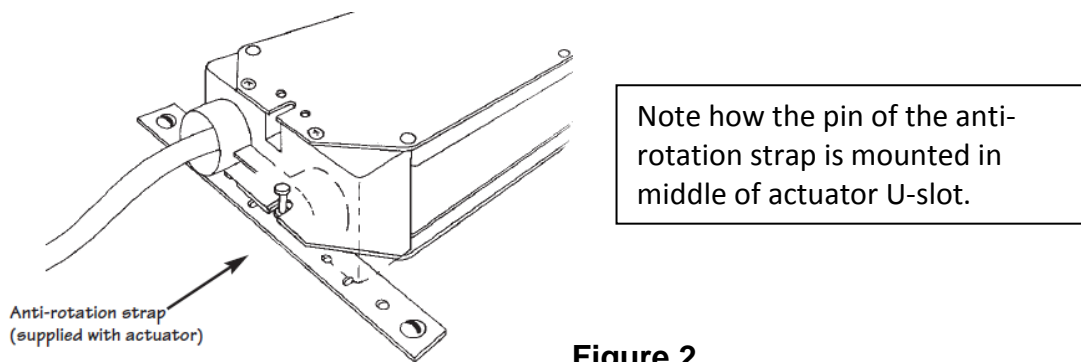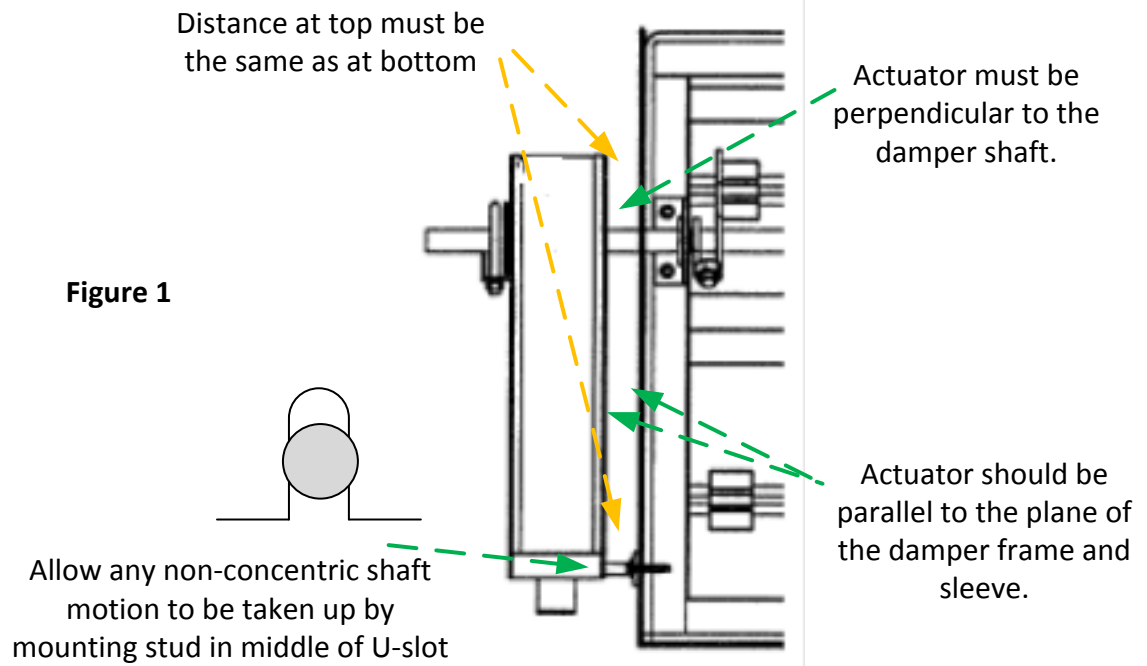


Use with FSLF only. FSNF & FSAF have too high a torque to be stable.

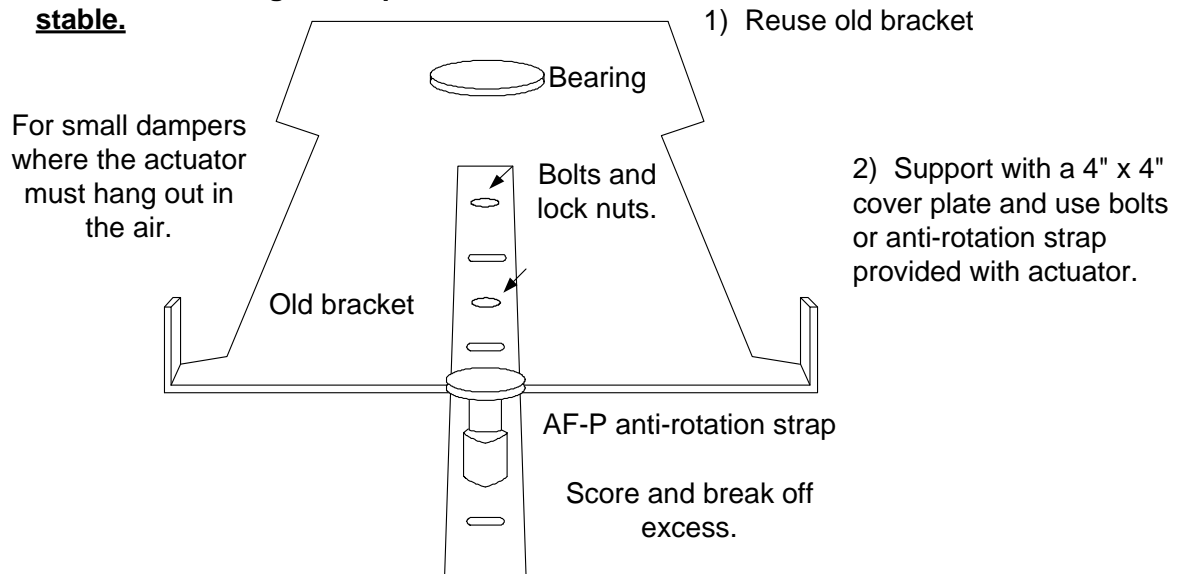

Best to mount the Belimo anti-rotation strap perpendicular to the actuator to allow for movement on non-concentric shaft.

FSTF


Best solution for small dampers where the HW bracket has been hung out into the air is to use an FSTF actuator

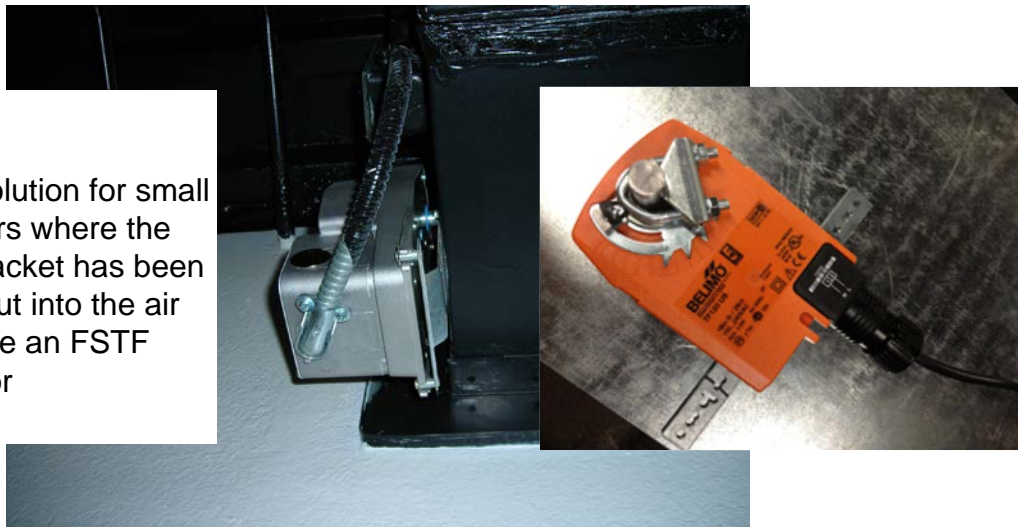

Short shaft mounting



For short shaft mounting, the ZG-LMSA-1/2-5 can be used. Alternately, the clamp can be installed between the actuator and sheet metal.

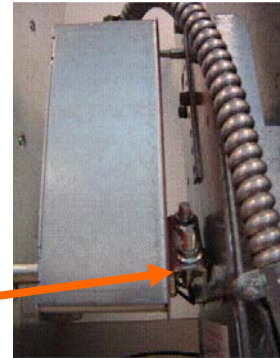

Clamp

Notes:


RUSKIN®

3900 Dr. Greaves Rd.

Grandview, MO 64030

**FIELD INSTALLATION INSTRUCTION FOR MODEL FSNF120/FSNF24
ACTUATOR MOUNTING IN THE AIRSTREAM
ON RECTANGULAR FIRE & LEAKAGE RATED DAMPERS**

ITEM	DRAWING NO.	DESCRIPTION
1		FIRE/SMOKE DAMPER
2		ACTUATOR: FSNF120 OR FSNF24
3		ANTI-ROTATION STRAP
4		TEK SCREW: #10-16 X 3/4" LG. HWH (4 REQ'D)

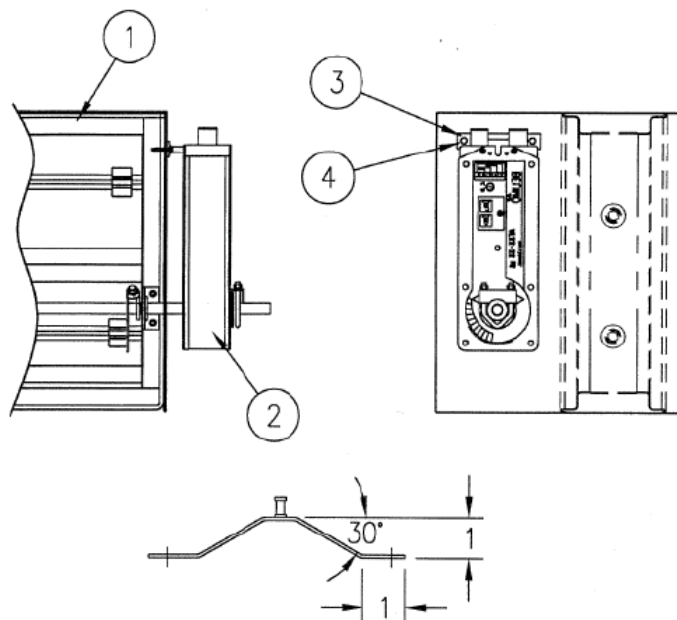

GENERAL INSTALLATION INSTRUCTIONS


1. OPERATE DAMPER MANUALLY TO DETERMINE THE DIRECTION OF ROTATION OF THE EXTENDED SHAFT ON WHICH THE FSNF ACTUATOR IS TO BE INSTALLED ON. LEAVE DAMPER IN THE FULLY OPEN POSITION.
2. ASSEMBLE CLAMP SUPPLIED WITH ACTUATOR AND INSTALL ON ACTUATOR. CLAMP WILL NEED TO BE LOCATED ON OUTSIDE OF MOTOR. INSTALL ACTUATOR ON EXTENDED SHAFT AS SHOWN. ACTUATOR MAY NEED TO BE ENERGIZED TO DETERMINE IF ACTUATOR ROTATION MATCHES DAMPER ROTATION. IF IT DOES NOT, REMOVE ACTUATOR AND FLIP 180°. CLAMP WILL ALSO NEED TO BE REMOVED AND REINSTALLED ON THE OPPOSITE SIDE OF ACTUATOR.
3. MANUALLY BEND ANTI-ROTATION STRAP TO MATCH ABOVE SKETCH.
4. INSTALL PIN ON ANTI-ROTATION STRAP INTO NOTCH ON BOTTOM OF ACTUATOR. SECURE ANTI-ROTATION STRAP TO DAMPER SIDE PLATE OR SLEEVE W/ (2) #10 X 3/4" LG. TEK SCREWS. MAKE CERTAIN THAT SCREWS WILL NOT INTERFERE WITH DAMPER LINKAGE.
5. ENERGIZE ACTUATOR. AFTER ACTUATOR STOPS ROTATING, TIGHTEN U-BOLT NUTS ON ACTUATOR CLAMP TO SECURE ACTUATOR TO DAMPER SHAFT.
6. DE-ENERGIZE ACTUATOR, DAMPER SHOULD REACH IT'S FULL CLOSED POSITION. CYCLE ACTUATOR SEVERAL TIMES TO ENSURE PROPER OPERATION.

14-020906-00B SHEET 1 OF 2 04/24/06

NOTES

1. DAMPER MUST BE RUSKIN U.L. CLASSIFIED LEAKED RATED TYPE. SEE TABLE FOR APPROPRIATE MODEL.
2. ACTUATOR MUST BE A U.L. LISTED FIRE DAMPER OPERATOR AND MARKED BY THE DAMPER MANUFACTURER.
3. ACTUATOR MUST BE SELECTED AND INSTALLED TO FUNCTION PER SYSTEM REQUIREMENTS. SEE TABLE TO DETERMINE THE MAXIMUM DAMPER SIZE, AIR FLOW, AND STATIC PRESSURE RATING FOR THE DAMPER/ACTUATOR ASSEMBLY.
4. ACTUATOR MUST BE CONTROLLED BY SMOKE DETECTION DEVICES OR FIRE ALARM SYSTEM.
5. INSTALLATION MUST COMPLY WITH LOCAL CODE AND NFPA70A REQUIREMENTS. NATIONAL ELECTRICAL CODE WITH LOCAL CODES HAVING JURISDICTION. SEE ELECTRICAL RATINGS MARKED ON ACTUATOR.
6. IF MULTIPLE ACTUATORS ARE REQUIRED ON DAMPER ASSEMBLY, ACTUATORS MUST BE INSTALLED TO OPERATE SIMULTANEOUSLY.
7. PROVIDE ADEQUATE SUPPORT FOR ACTUATOR TO GUARANTEE PROPER DAMPER FUNCTION. GENERAL INSTALLATION IS DEPICTED ON PREVIOUS SHEET. INSTALLATION MUST BE COMPLETED WITH THE HARDWARE PROVIDED.
8. DAMPER OPERATOR MUST BE WIRED TO EFL, EFL/SP100, OR TS150 SO THAT INCREASE IN TEMPERATURE WILL CLOSE DAMPER.

MAXIMUM SQUARE FOOT RATING FOR FSNF120/FSNF24 ACTUATOR				
DAMPER	A X B	MAX. SQ. FT.	MAX. VELOCITY (FPM)	MAX. STATIC PRESSURE
FSD35	72 X 36	8	2000	4"
FSD36	72 X 36	8	2000	4"
FSD37	64 X 36	8	2000	4"
FSD60	64 X 36	8	2000	4"

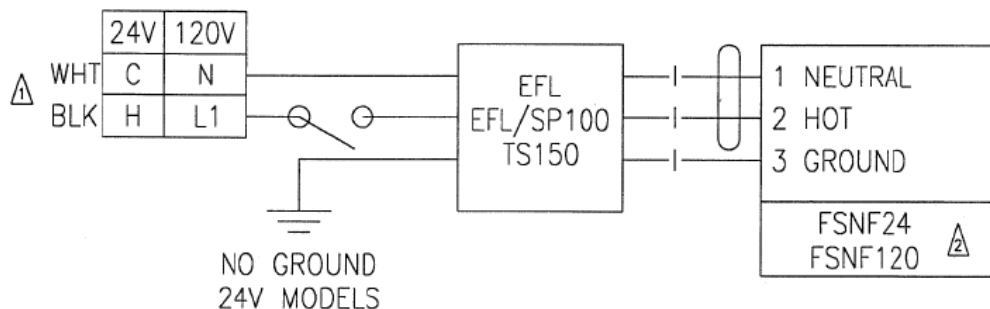

- △ PROVIDE OVERLOAD PROTECTION AND DISCONNECT AS REQ'D.
- △ ACTUATORS MAY BE CONNECTED IN PARALLEL. POWER CONSUMPTION MUST BE OBSERVED.

TYPICAL WIRING

RUSKIN®


14-020906-00B SHEET 2 OF 2 04/24/06

Linkage mounting




WARNING!

Read Data Sheet provided in box with each actuator for specific wiring details.

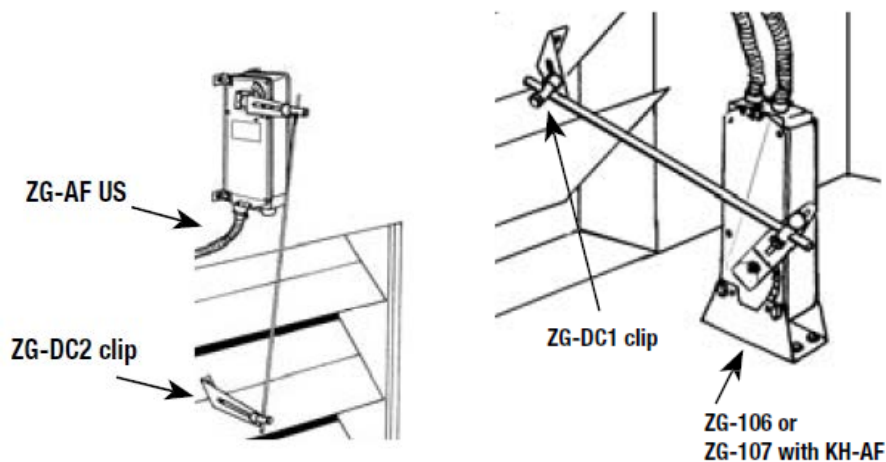

Possible alternate arrangements for damper clip. (FSNF, FSAF actuators shown.)

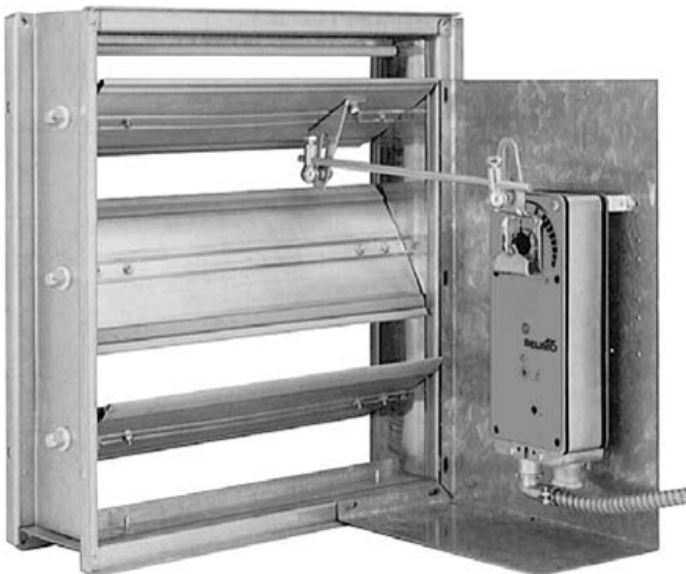

Belimo linkage kits:

https://www.belimo.com/pim/mam/americas/technical_documents/data_sheets/man-air-acc/Mechanical_Accessories.pdf

Mounting Methods Guide:

https://www.belimo.us/mam/americas/technical_documents/pdf-web/guides/mounting_methods.pdf

Miscellaneous parts

Should they be needed, Belimo carries a range of parts. Ball joints and 5/16" rods are available from most distributors.



KH12

Where the crank arm on the jackshaft is broken or not of the type needed, the KH12 fits over the shaft without removing it. Zinc plated steel. Slot is for the KG10A ball joint. V-bolt fits 3/4" to 1" (20 to 25mm) shafts.



KH8

KH-6. Zinc plated steel. For shafts 3/8" to 11/16"
Uses KG6 ball joint. Slot width 1/4"

KH-8. Zinc plated steel. For shafts 3/8" to 11/16"
Uses KG8 (90 degree) or KG10A ball joint. Slot width 21/64"



KG8 3/8"



KG6, KG10A 1/4"

SH8 (not shown – see picture page 9). Push-rod for KG6 & KG8 ball joints. 5/16" 36" long
Use SH10 3/8" rods for GMB and dual FSAF or FSNF linkages. 5/16" can bend under heavy loads.

ZG-DC1



ZG-DC1 Damper blade clip and ball joints for blades typically 3.5" in width. Typically the actuator or rod to shaft is in front of blade.

ZG-DC2



ZG-DC2 Damper blade clip and ball joints – typically used for 6" wide blade control dampers. Typically the actuator or rod to shaft is above or below the damper.

Wiring



WARNING!

Disconnect and lock out power before starting to disconnect old motor.




While the wiring may look like a rat's nest, it is actually straightforward as shown in the drawings below.

There are three wiring schemes that describe all applications. While the geometry of the wire runs may vary, the connections are straightforward.

ad

TYPICAL FIRE - SMOKE COMBINATION DAMPER WIRING


Electric thermal disc

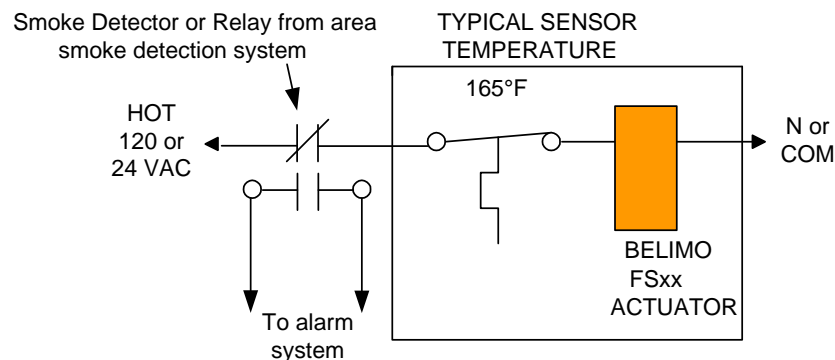


Regardless of the wiring routes used, this drawing shows the wiring necessary for a UL555S damper and actuator. Use it as a basis for any of the other wiring schematics. Note that the alarm connections are not touched when replacing an actuator. This is a major concern for Fire Marshals.

Old Honeywell with actuator wiring compartment used for junctions.

Honeywell Wiring

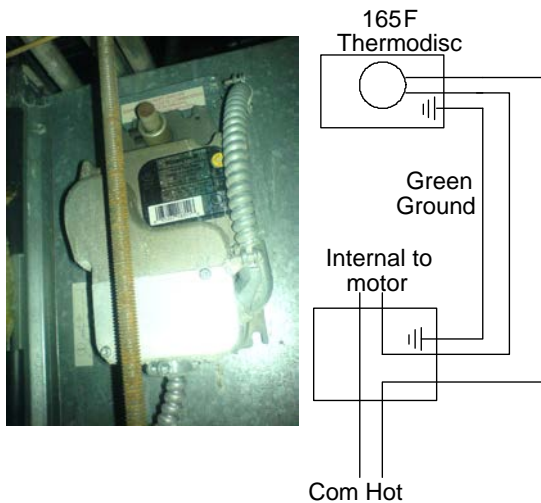


Belimo Mechanical

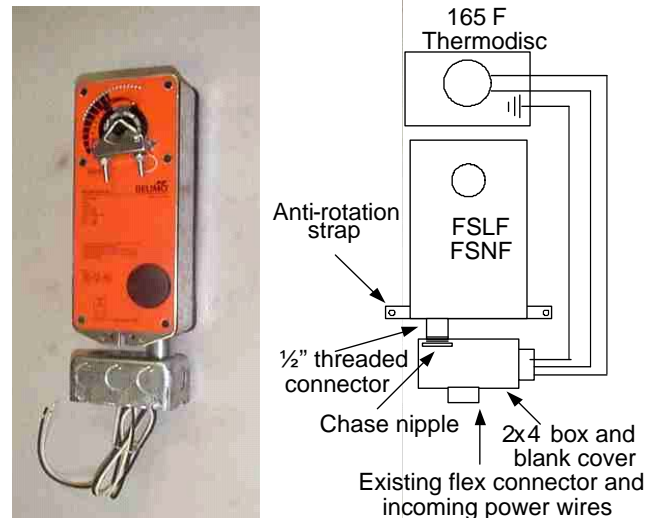

The wiring below is commonly connected to alarm or smoke control electronic modules in modern systems. The functional sequence is the same.


In rare cases the Honeywell motor was installed as a retrofit on dampers with fusible links. There is no electric sensor in the damper in that case as there is typically a shaft spring performing the fire function. Wiring is shown to right.

Fusible link DAMPER ACTUATOR WIRING

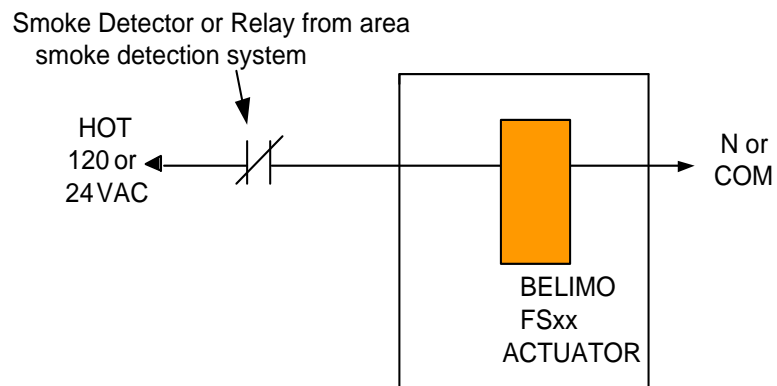

TYPICAL REOPENABLE DAMPER with FSCS

Belimo Auxiliary Switches for position indication to FSCS

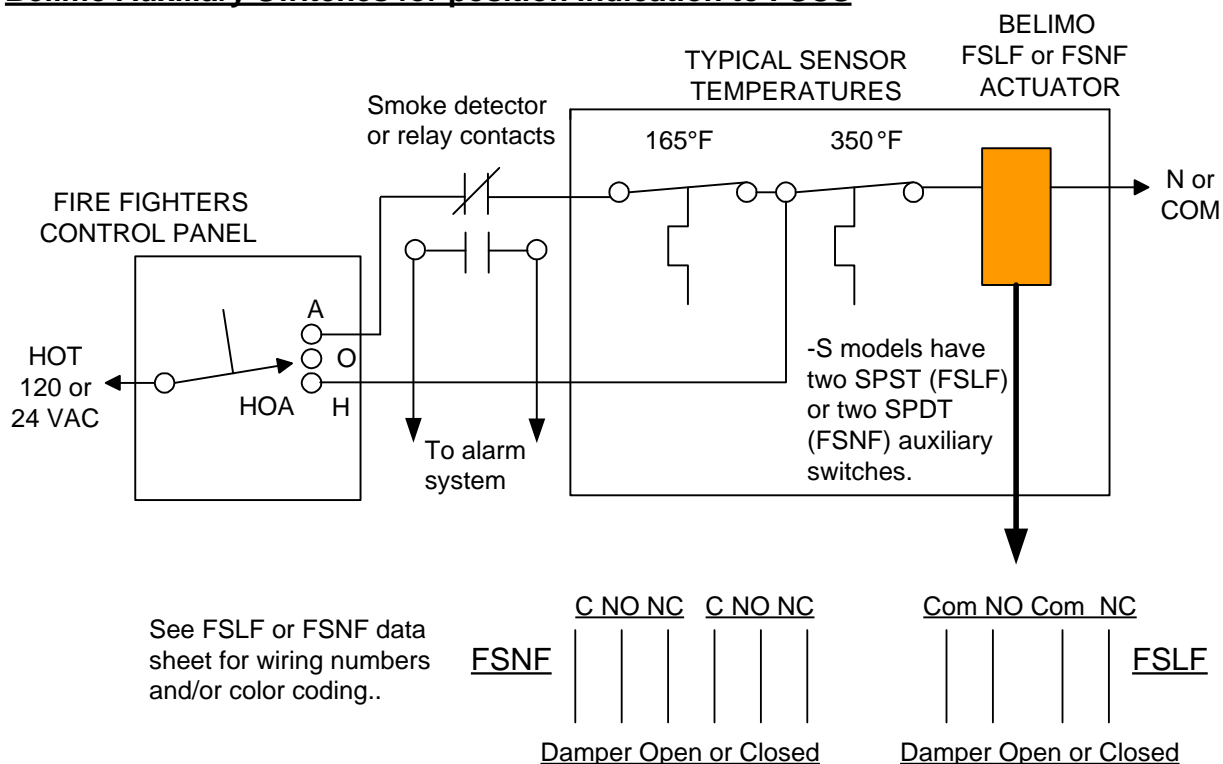

The auxiliary switches are used to provide status indication to the fire fighters' smoke control panel. Typically there are two or three status lights or leds. This wiring is the responsibility of the fire alarm company. If it is touched, they must retest to verify proper operation. These switches are not alarm, but rather indicating.



WARNING!

- Damper must be free to move from open to closed without undue stress.
- Damper and duct must be clean and free of all debris.
- Test damper and controls per Fire Marshal's checklist below.
- Fire alarm company may need to be present to verify proper status indication at FSCS panel.

Thermal sensor replacements

Original equipment is recommended although not strictly required by code. UL does not regulate replacement or repair. See NFPA 80 or NFPA 105.



Belimo BAE165 US

Where existing sensor is defective or one must be added, the 165°F primary sensor may be used.

The Ruskin EFL (electronic fuse link) may be purchased from Ruskin reps. For the dual sensor for reopenable dampers the TS150 may be used.
<http://www.ruskin.com/> Search either part number and use “Documents” to retrieve.

Auxiliary Switches

Where the original switches for signaling position to a Fire Fighters’ Smoke Control Panel or to local indicator lights must be replaced or are inoperative, the Belimo –S model actuators may be used.


Damper blade switch assembly





Honeywell external switches

Over many operations the Honeywell switch slips and exact position indication is lost. The Belimo S2A-F switch will not slip.

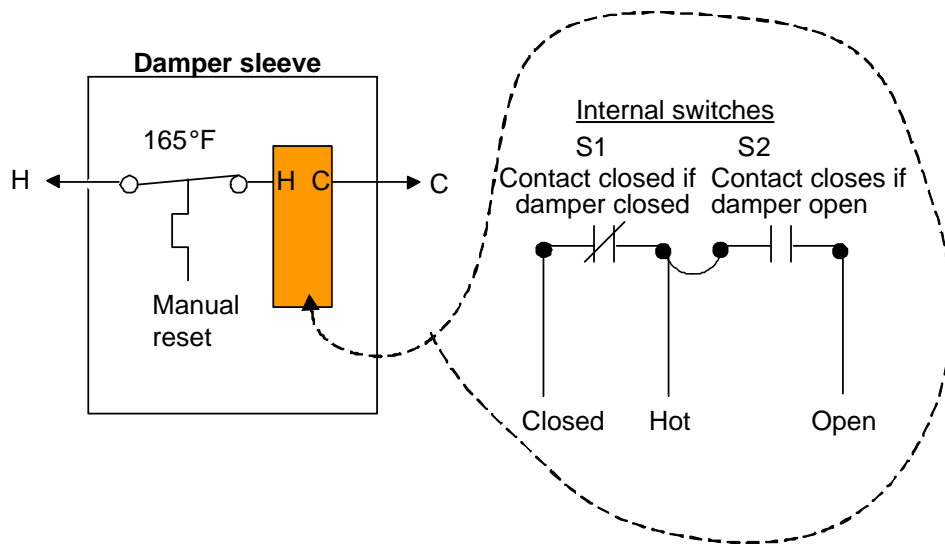

S2A-F Auxiliary switch package for the FSLF, FSNF, and FSAF

Where an add-on switch is needed, the S2A-F may be employed. It has two adjustable SPDT switches.



Building Official / Fire Marshal Notification Form

Retain this portion of checklist at premises for Fire Marshal inspection. See local AHJ or Fire Marshal for other information and requirements regarding conformance with NFPA 80 & NFPA 105.

☐ Test Checklist (Smoke dampers do not have sensors. Only steps a & b apply.)

1. Single Sensor Combination Damper

- a. ☐ Open smoke detector or relay wire or contact to cut power. *Damper springs closed.*
- b. ☐ Reconnect power. *Damper drives open.*
- c. ☐ Open thermal sensor using heat gun. *Damper springs closed.*
- d. ☐ Press thermal sensor manual reset. *Damper drives open.*

Repeat 3 times to ensure operation. This imitates UL555S test.

2. Reopenable Two Sensor Fire-Smoke Combination Damper

(Since this system involves the Firefighters' Smoke Control System, inform fire department.)

With FSCS switch in Auto position:

- a. ☐ Disconnect power from smoke detector or relay contacts. *Actuator springs damper closed.*
- b. ☐ Reconnect power. *Actuator drives damper open.*
- c. ☐ Trip thermal sensor. *Actuator springs damper fully closed.*
- d. ☐ Press manual reset. *Actuator drives damper open.*

Test FSCS switch functions:

- a. ☐ Move FSCS switch to Off position. *Actuator springs damper fully closed.*
- b. ☐ Move FSCS switch to Hand position. *Actuator drives damper open.*
- c. ☐ Trip secondary (higher temperature) thermal sensor. *Actuator springs damper fully closed.*
- d. ☐ Press manual reset of secondary sensor. *Actuator drives damper open.*

Move FSCS switch back to Auto position:

- a. ☐ Actuator springs damper closed if Primary sensor is still open.
- b. ☐ Actuator stays open if Primary sensor has re-closed.

☐ When completed, ensure sensors are reset and smoke detector is in normal state and FSCS switch is in Auto. Damper is normally Open; check sequence of operation.

Damper Numbers or Location Identifying Numbers.....

Date.....-.....-.....

Contractor.....

Service Technician (Print).....

Service Technician (Signed).....

Phone Number (.....).....

Notes.....

.....

.....