

**Expansion valve**

- With integrated superheat controller
- Feedback signal: Modbus or analogue 0...10 V
- Suitable for safety class A3 refrigerants (ISO 817)
- Suitable for CFC, HFC, HFO and R290 refrigerants
- Tight-closing
- Safety closing with SuperCap



Picture may differ from product

**Type Overview**

Type	Cooling output	ODF	PN
X8016M.11AA4	100 kW	16-16 mm	50
X8016M.21AA4	200 kW	16-16 mm	50
X8022M.32AA4	500 kW	22-22 mm	50
X8028M.1AAA4	100 kW	28-28 mm	50
X8028M.2AAA4	200 kW	28-28 mm	50
X8035M.2AAA4	200 kW	35-35 mm	50
X8042M.3BAA4	500 kW	42-42 mm	50

 With R134a @ T<sub>c</sub> = 50°C, T<sub>e</sub> = 5°C, SC = SH = 5 K

**Technical data**

<b>Electrical data</b>	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 21.6...28.8 V / DC 21.6...28.8 V
	Power consumption in operation	1.5 W
	Power consumption for wire sizing	2.6 VA
	Connection supply / control	Cables not included in scope of delivery; use Belimo cables Z-C24X4.. only
<b>Functional data</b>	Running time motor	20 s / 90°
	Running time fail-safe	15 s / 90°
	Configuration	via smartphone via xBALL Syncra App via radio interfacing
	Fluid	CFC, HFC, HFO, R290
	Fluid temperature	-20...70°C [-4...158°F]
	Fluid temperature note	with ZCQ-E 70...120°C [158...248°F]
	Differential pressure Δp <sub>max</sub>	3500 kPa
	Flow characteristic	equal percentage (VDI/VDE 2178)
	Flow setting	See installation instruction
	Leakage rate	air-bubble tight, leakage rate A (EN 12266-1)
	Pipe connection	Internal soldering sleeve ODF
	Installation orientation	upright to horizontal (in relation to the spindle)
	Servicing	maintenance-free
Manual override	with actuator (clicked out)	
<b>Safety data</b>	Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
	Degree of protection IEC/EN	IP54
	RED	CE according to 2014/53/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14

**Technical data**

<b>Safety data</b>	Type of action	Type 1
	Rated impulse voltage supply / control	0.8 kV
	Pollution degree	2
	Compatible refrigerants	R1233zd(e), R1234yf, R1234ze, R1270, R134a, R290, R32, R404a, R407A, R407c, R410a, R449A, R449C, R452A, R452B, R454A, R454B, R454C, R463A, R507a, R513A, R514A, R515B, R600, R600a, R744
	Flammable refrigerants	The product is not to be considered a source of ignition when used together with A2L and A3 classified refrigerants and is compliant with clauses 22.116 and 22.117 from IEC 60335-2-40. Compliance with clause 22.117 has been checked by measuring the appropriate surface temperatures during the tests of IEC 60335-2-40, clauses 11 and clauses 19. The maximum surface temperature of the devices and components did not exceed the temperature limit of 370°C.
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	-30...50°C [-22...122°F]
	Ambient temperature note	Without radiation
	Storage temperature	-40...80°C [-40...176°F]
	<b>Materials</b>	Valve body
Closing element		Stainless steel AISI 316L
Spindle		Stainless steel AISI 316L or chrome-plated brass
Spindle seal		HNBR O-ring
<b>Terms</b>	Abbreviations	POP = Power off position / fail-safe position PF = Power fail delay time / bridging time

**Safety notes**



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: Only possible if no (sea) water, snow, ice, sunlight or aggressive gases act directly on the device and if it is ensured that the ambient conditions remain within the limit values specified in the data sheet at all times.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- The valve has been designed for use in stationary electrical heat pumps, air-conditioning systems and dehumidifiers and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- The suitability of these products for applications in which flammable refrigerants are used must be checked by the user for each individual application. Any application is the sole responsibility of the user.
- The valve does not contain any parts that can be replaced or repaired by the user.
- The valve may not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

**Operating mode** The ball valve is adjusted by a rotary actuator.  
The ball valve is opened in a counterclockwise direction and closed in a clockwise direction.

**Pre-charging time (start up)** The capacitor actuators require a pre-charging time. This time is used for charging the capacitors up to a usable voltage level. This ensures that, in the event of a power failure, the actuator can move at any time from its current position into the fail-safe position. The duration of the pre-charging time depends mainly on how long the power was interrupted.

Typical pre-charging time

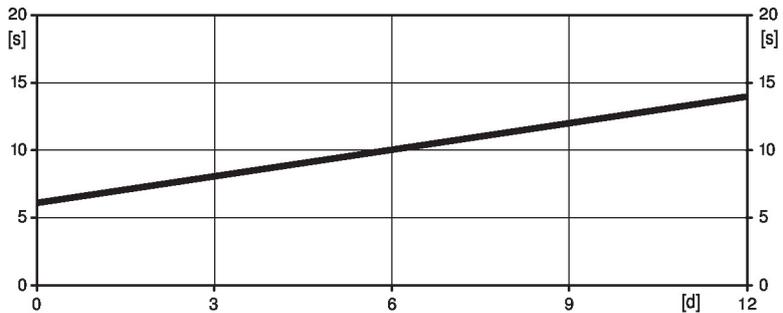

[d] = Power failure in days  
[s] = Pre-charging time in seconds

	[d]				
	0	3	6	9	12
[s]	6	8	10	12	14

**Delivery condition (capacitors)** The actuator is completely discharged after delivery from the factory, which is why the actuator requires approximately 25 s pre-charging time before initial commissioning in order to bring the capacitors up to the required voltage level.


Electrical installation



**Supply from isolating transformer.**  
Parallel connection of other actuators possible. Observe the performance data.


Wire colours:

- 1 = black
- 3 = red
- 2 = brown
- 4 = orange
- 5 = yellow

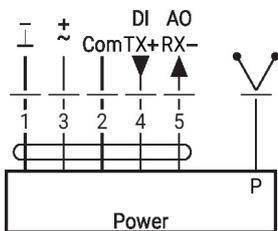

- P = Probe
- TX+ = Control (digital)
- DI = Control (analogue)
- RX- = Control (digital)
- AO = Control (analogue)

## Operating controls and indicators

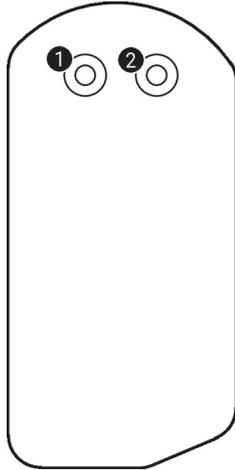


- ① Power – Connector socket for power supply and refrigeration machine controller
- ② Probe – Connector socket for pressure and temperature probes

## LED displays

LED	Meaning / function
Off	No power
Only LED under the connectors on	Device powered and valve closed
On, 2 at a time according to the direction of motion	Opening / closing
All on	Device starting up
All flashing	Radio connection in progress
Flashing on the two extremes	Alarm (manual positioner left active with app connection missing or with hardware malfunction)


## Installation notes

**Permissible installation orientation** The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the spindle pointing downwards.

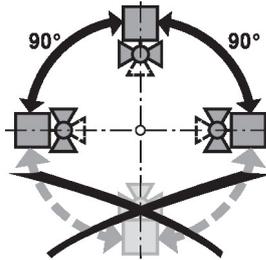


Installation notes

Installation situation

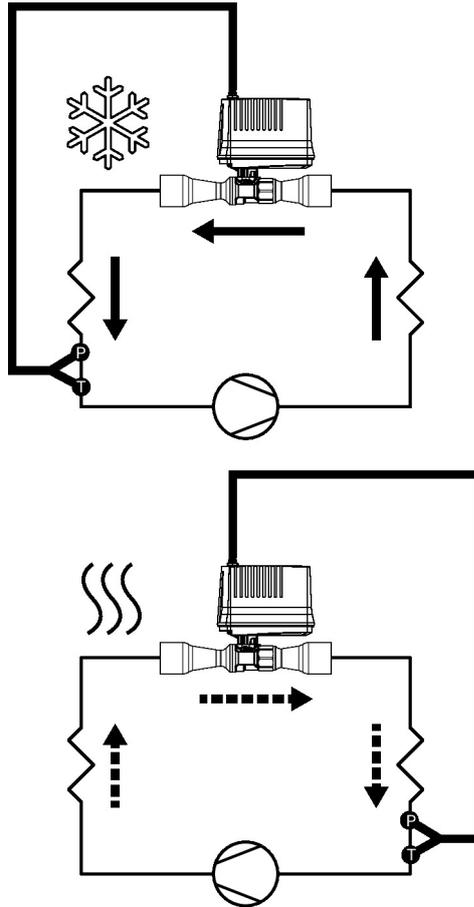


**Servicing** Ball valves and rotary actuators are maintenance-free.  
 Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). The operating conditions of the refrigerant circuit and its components must be observed.

**Flow direction** Direction of flow in both directions possible.

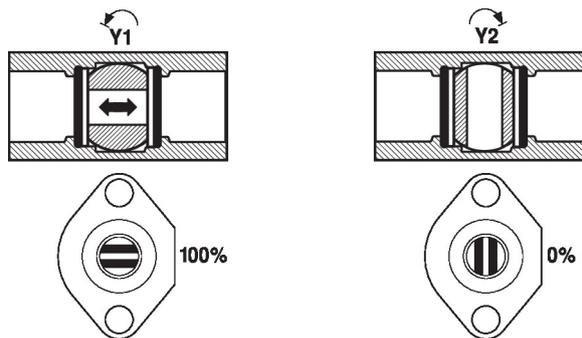

## Dimensions

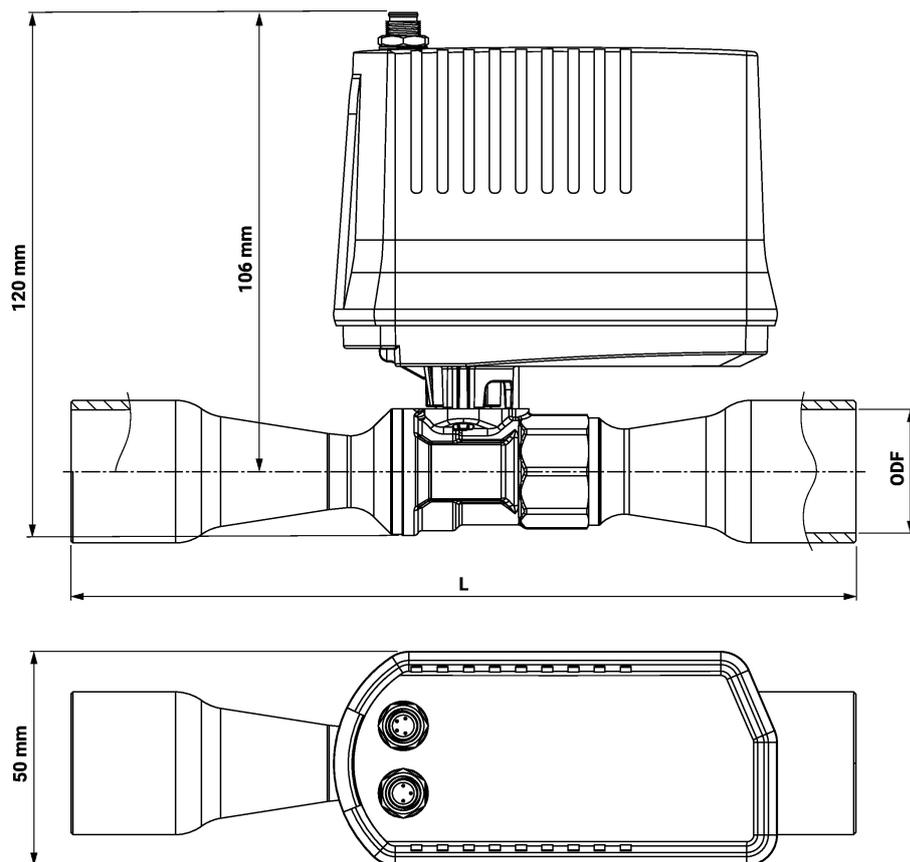

Type	L [mm]	ODF	Weight
X8016M.11AA4	180	16-16 mm	0.57 kg
X8016M.21AA4	180	16-16 mm	0.59 kg
X8022M.32AA4	190	22-22 mm	0.68 kg
X8028M.1AAA4	180	28-28 mm	0.69 kg
X8028M.2AAA4	180	28-28 mm	0.79 kg
X8035M.2AAA4	180	35-35 mm	0.88 kg
X8042M.3BAA4	190	42-42 mm	0.97 kg